

AMETEK[®] TEST & CALIBRATION INSTRUMENTS

m1 Quick Reference

Note: Pressing the enter button always returns the gauge to operating mode. If you want to set multiple Display Functions, press the setup button to navigate from one Display Function to the next, then press the enter button when you are done.



Gauge Setup Map



Gauge Setup Map continued



for the display due to electrical malfunction or numerical error. Contact factory for further instructions.

Err 5 or **Err 6** displayed: The M1 pressure sensor is exhibiting behavior out of normal

operating condition. Contact factory for sensor replacement.

Note: If there is no gauge activity for 10 seconds, the gauge will return to operating mode. Any Setup options that you have selected will be enabled.

the battery icon will change from **(TER)** to **EEE** indicating that the M1 is in Ultra Low Power Mode.

Note: Whenever one of the rd settings is selected,





© 2013 Crystal Engineering Corporation 708 Fiero Lane, Suite 9, San Luis Obispo, California 93401-8701



